
BODY DIMENSIONS

CONTENTS

**BODY DIMENSIONS AND MEASUREMENT
METHODS 2**

TYPE A (PROJECTED DIMENSIONS) 4

 UNDER BODY 4

 INSTALLATION OF SUSPENSION 6

**TYPE B (ACTUAL-MEASUREMENT
DIMENSIONS) 8**

 UNDER BODY 8

 INSTALLATION OF SUSPENSION 10






 FRONT BODY 12

 SIDE BODY 14

 REAR BODY 15

 INTERIOR 16



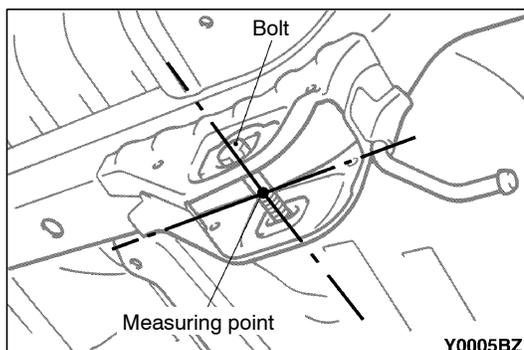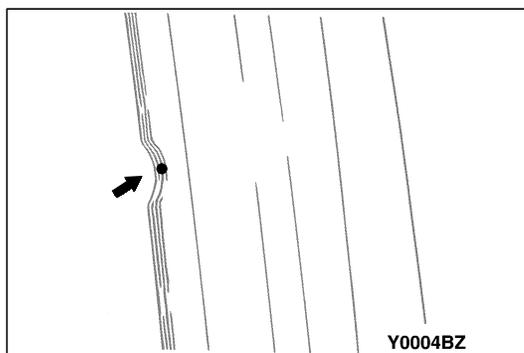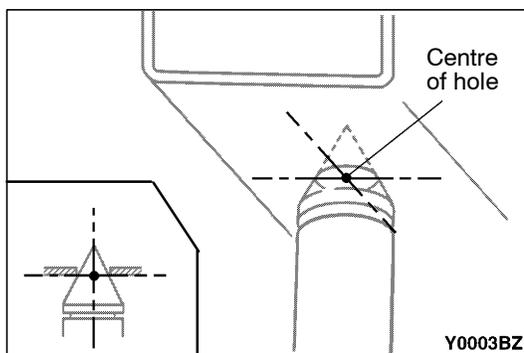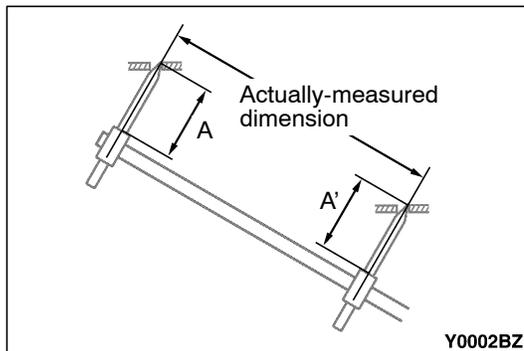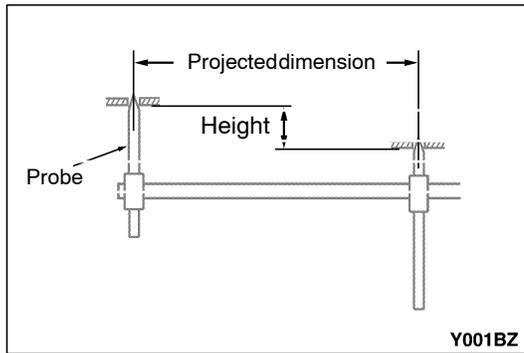

BODY DIMENSIONS AND MEASUREMENT METHODS

1. Type A (projected dimensions)
Indicates the dimension when a measurement location is projected onto a plane.
The difference in height of the measurement points should be taken into consideration when measuring.

2. Type B (actual-measurement dimensions)
Indicates the actual distance between the measurement points.
Measure using a tracking gauge or a measuring tape, etc.

NOTE

- Make the lengths of the tracking gauge probes the same ($A=A'$).
- Do not bend or twist the measuring tape.

3. Insert the tracking gauge probes securely into the measurement holes
4. When the standard dimensions in the illustration are enclosed by, this indicates that the symmetrical left and right positions have the same dimensions.

5. When using a notch for dimension measurement, set the measuring point at the centre of the notch.

6. When measuring the suspension mounting arm, or link mounting position, use the suspension mounting bolt, etc..
7. The body centre points are shown for the purpose of checking the position of the left and right symmetry locations.


NOTES

<EVOLUTION- >


TYPE A (PROJECTED DIMENSIONS)

UNDER BODY

mm

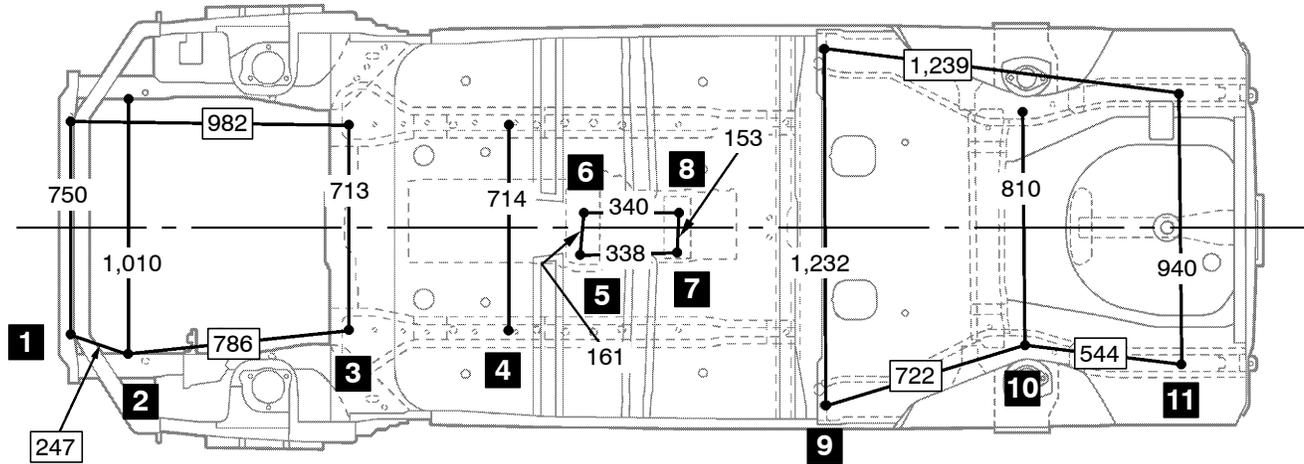


Y0641AV

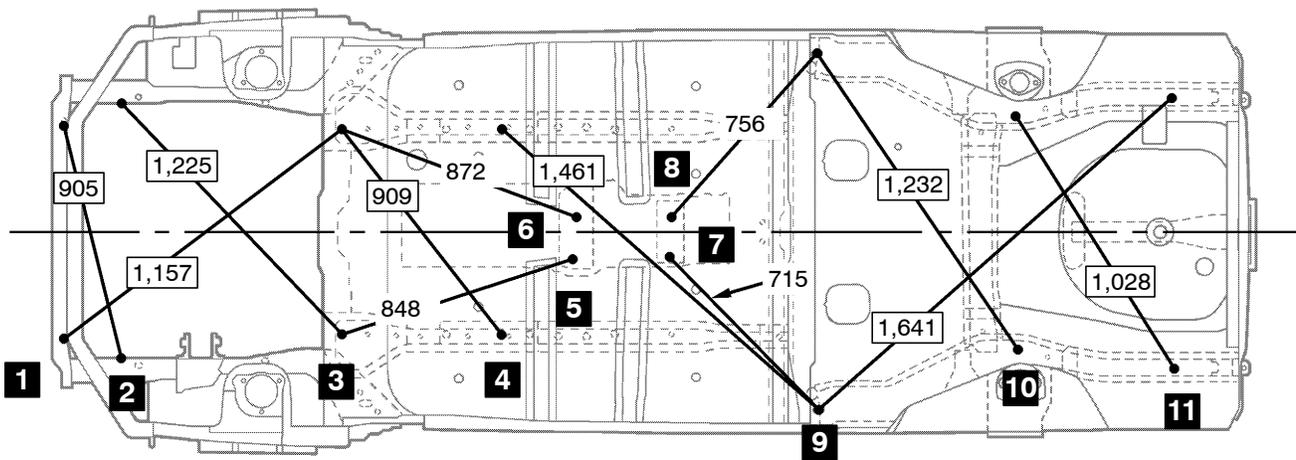







Y0642AV

mm

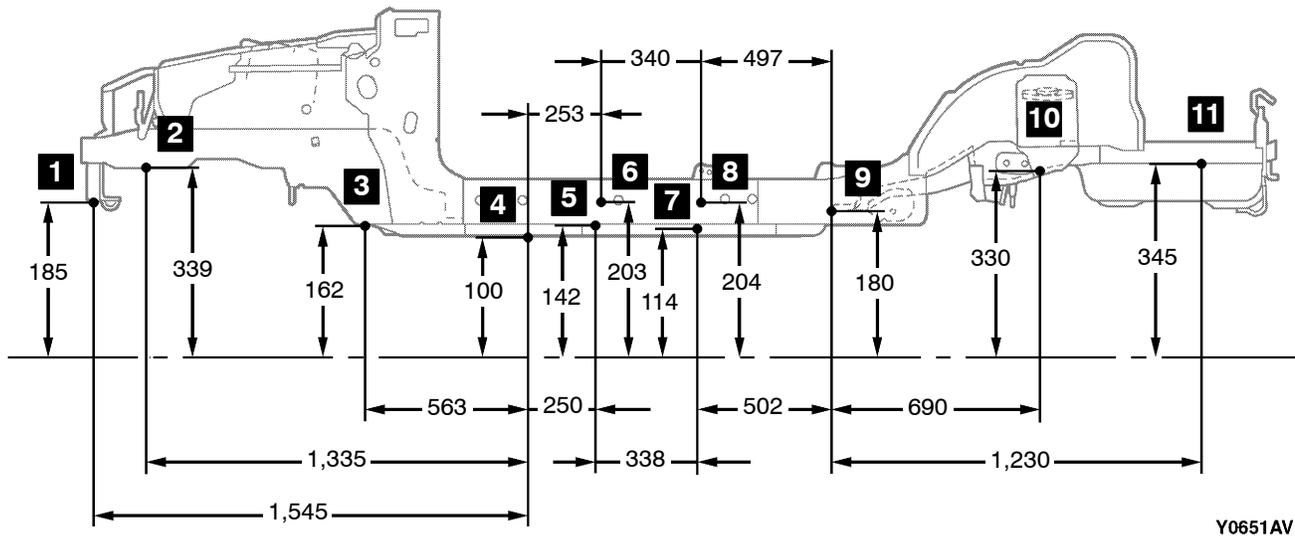


No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
1*	Centre of under cover mounting hole	-	8	7	Front edge of center bearing mounting bolt	-	-
2	Notch of front sidemember inner	-	-	8	Front edge of center bearing mounting bolt	-	-
3*	Centre of crossmember mounting hole	-	18	9*	Centre of rear seat crossmember positioning hole	-	22 x 38
4*	Centre of front floor sidemember positioning hole	-	25	10*	Centre of crossmember mounting hole	-	14
5	Front edge of center bearing mounting bolt	-	-	11*	Centre of rear floor sidemember extension drain hole	-	20
6	Front edge of center bearing mounting bolt	-	-				

NOTE: The "*" in the No. column means the frame centre ring gauge mounting position.

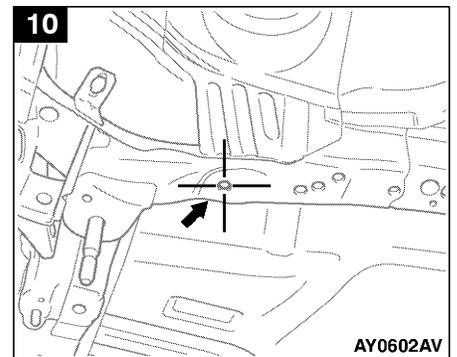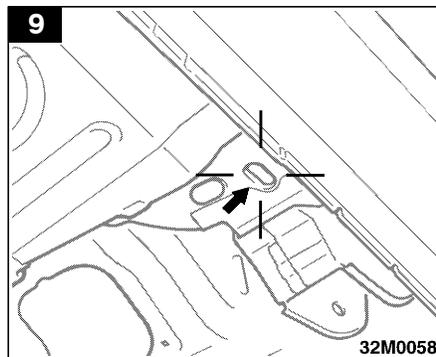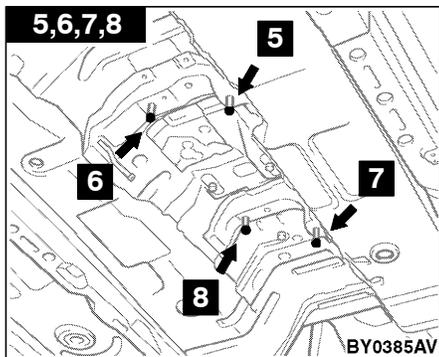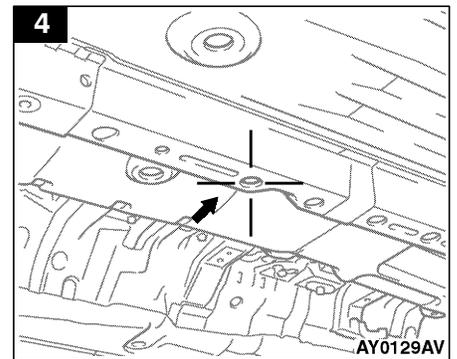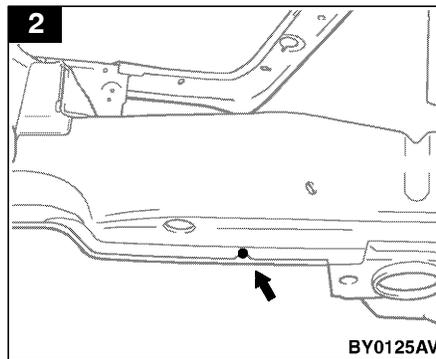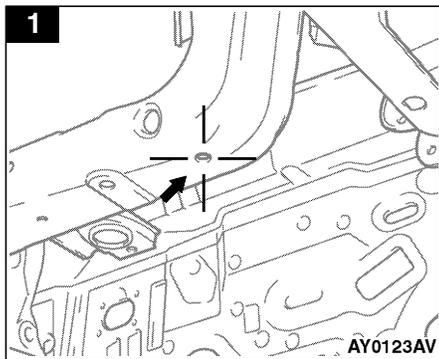


INSTALLATION OF SUSPENSION




mm

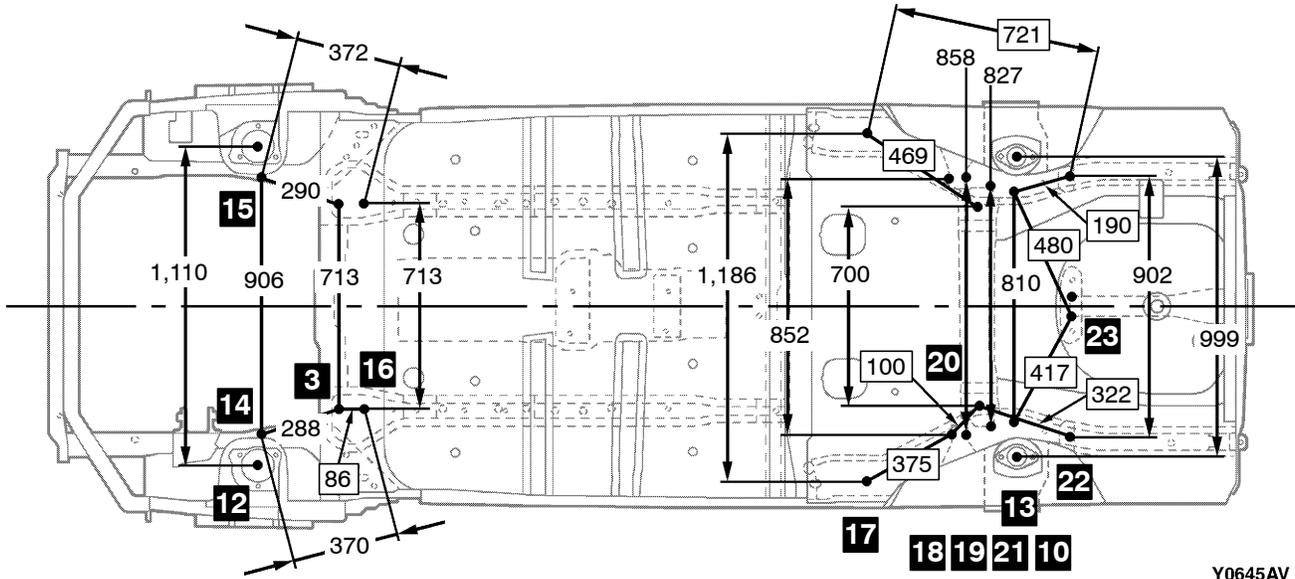




Y0645AV

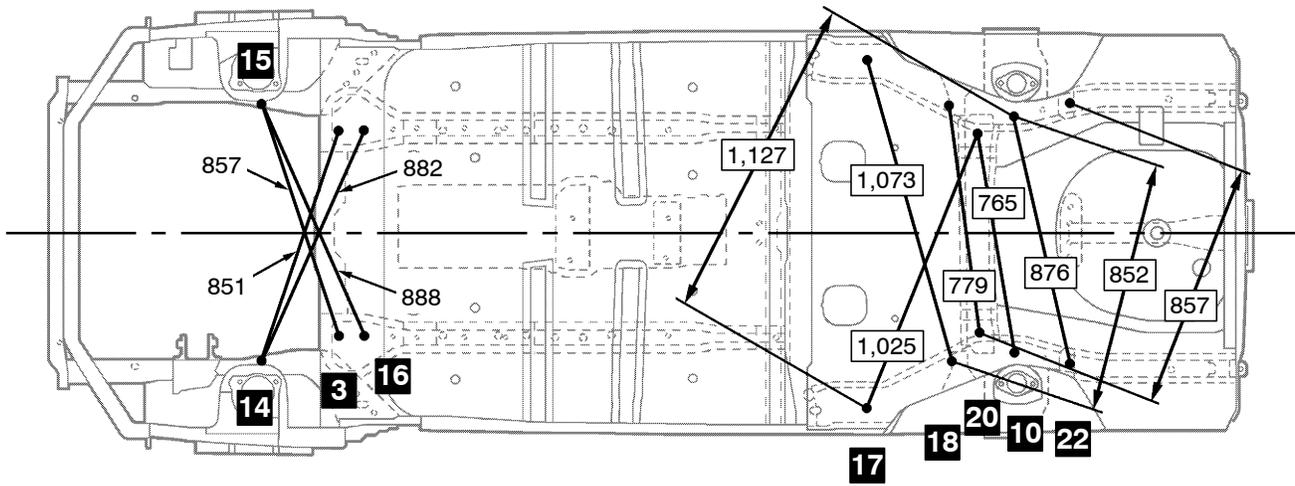

Y0646AV

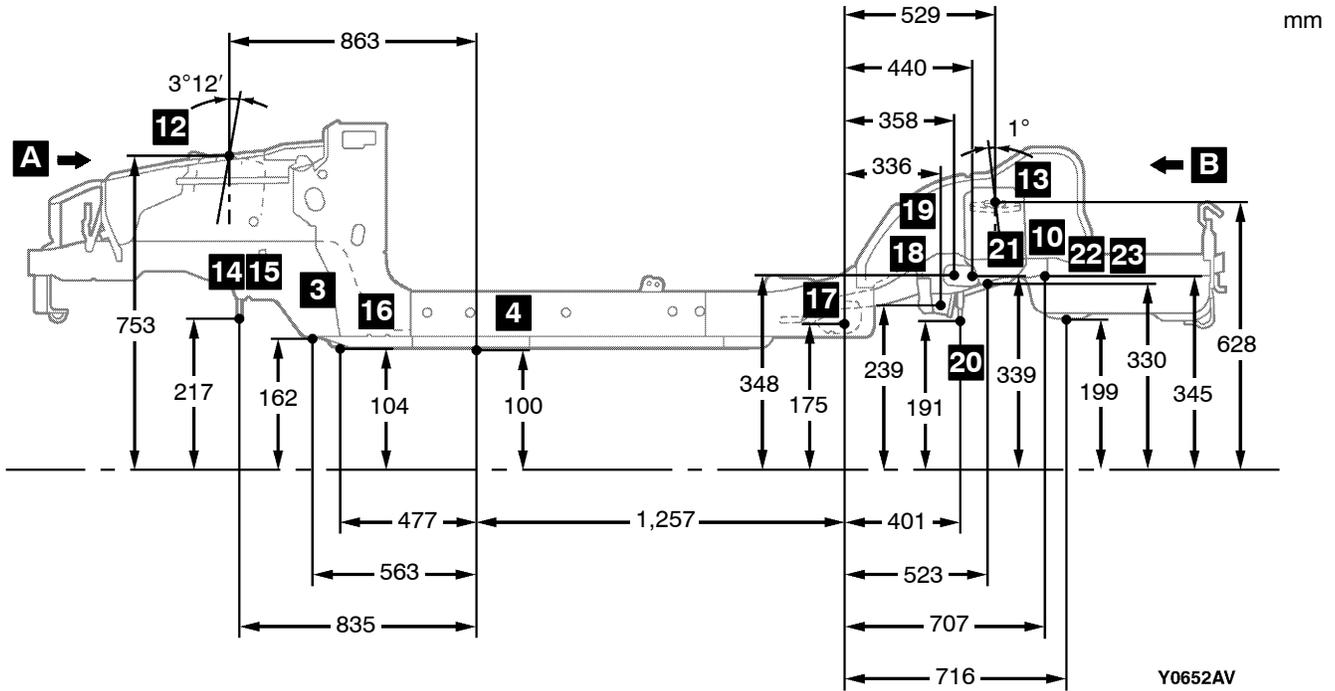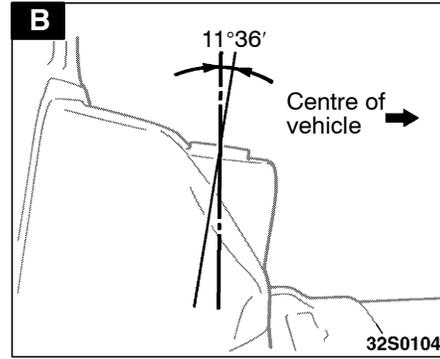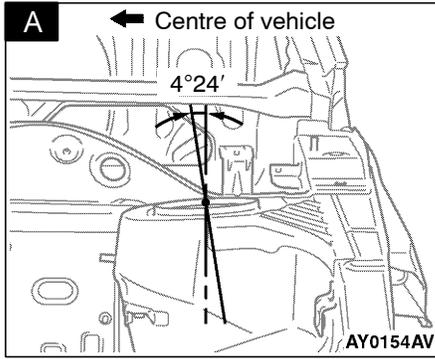


No.	Standard measurement point	Hole shape - Size mm	No.	Standard measurement point	Hole shape - Size mm
3	Centre of crossmember mounting hole	- 18	17	Trailing arm mounting position	-
4	Centre of front floor sidemember positioning hole	- 25	18	Control link mounting position	-
10	Centre of crossmember mounting hole	- 14	19	Centre of upper link mounting hole	- 14
12	Centre of strut insulator	- 110	20	Front edge of differential support mounting bolt	-
13	Centre of rear shock absorber mounting hole	- 68	21	Centre of upper link mounting hole	- 14
14	Front edge of crossmember mounting bolt (Left side)	-	22	Centre of upper arm mounting hole	- 13
15	Front edge of crossmember mounting bolt (Right side)	-	23	Centre of crossmember mounting hole	- 15
16	Centre of crossmember mounting hole	- 11			

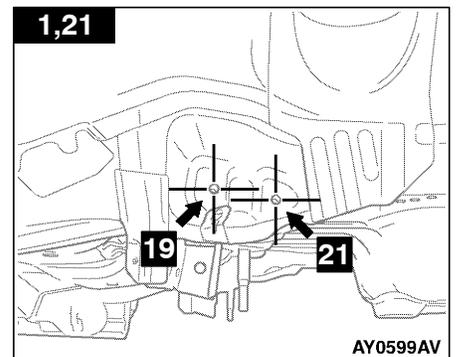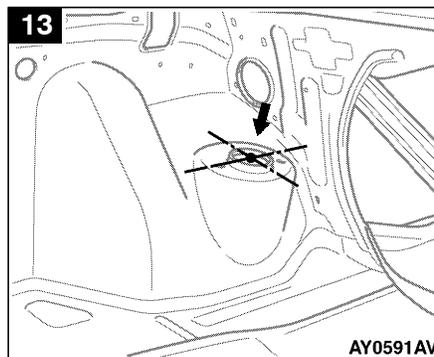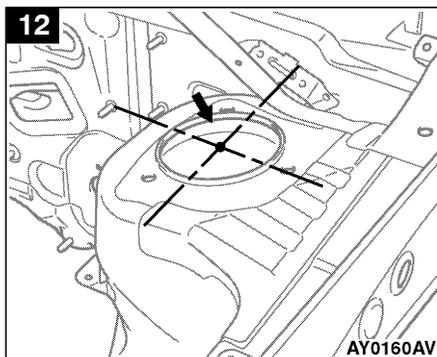


TYPE B (ACTUAL-MEASUREMENT DIMENSIONS)

UNDER BODY

mm








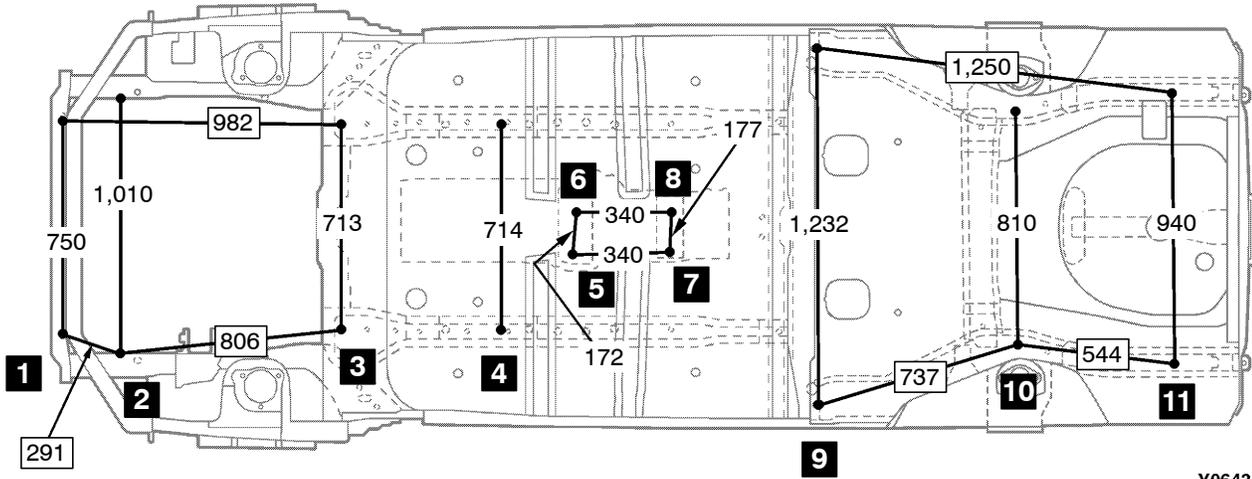


Y0643AV

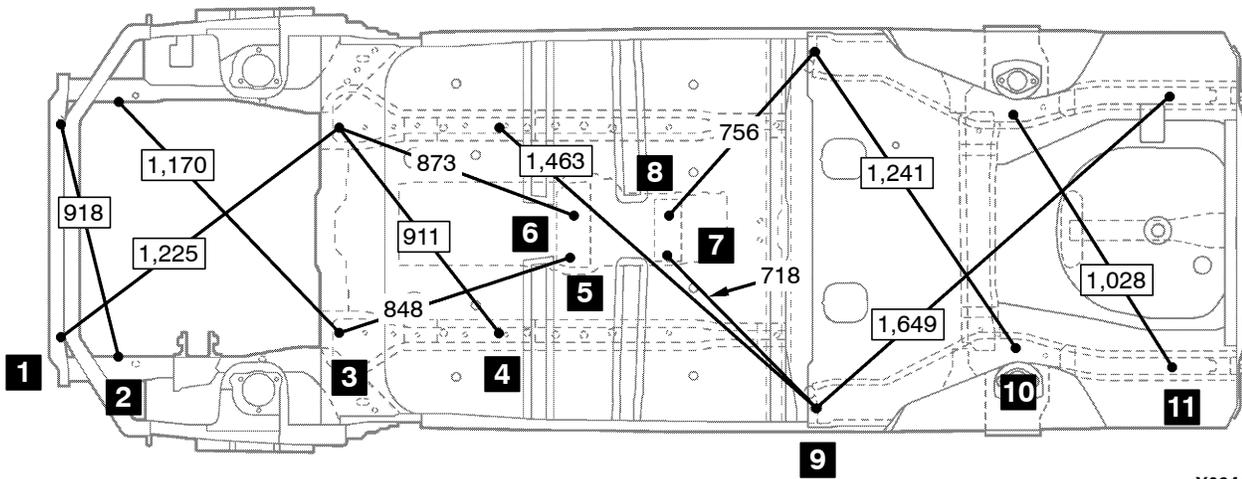


Y0644AV

No.	Standard measurement point	Hole shape - Size mm	No.	Standard measurement point	Hole shape - Size mm
1	Centre of under cover mounting hole	-8	7	Front edge of center bearing mounting bolt	-
2	Notch of front sidemember inner	-	8	Front edge of center bearing mounting bolt	-
3	Centre of crossmember mounting hole	-18	9	Centre of rear seat crossmember positioning hole	-22 x 38
4	Centre of front floor sidemember positioning hole	-25	10	Centre of crossmember mounting hole	-14
5	Front edge of center bearing mounting bolt	-	11	Centre of rear floor sidemember extension drain hole	-20
6	Front edge of center bearing mounting bolt	-			

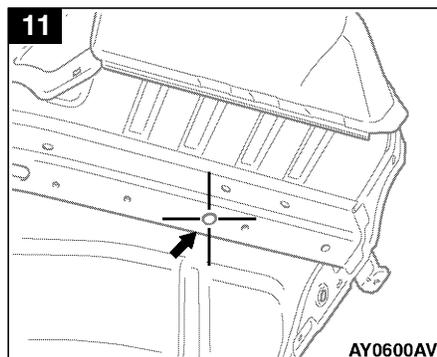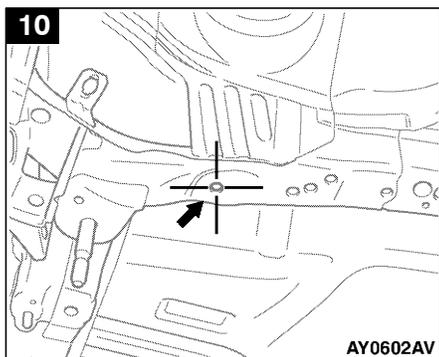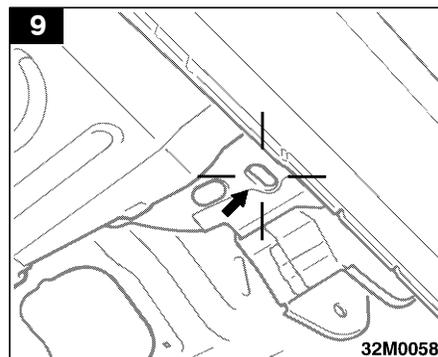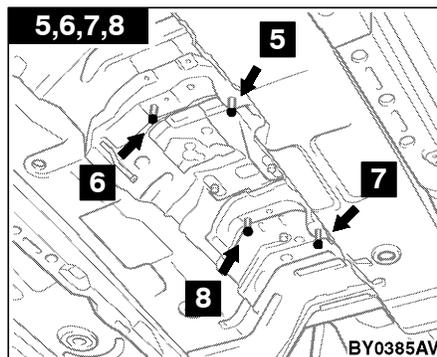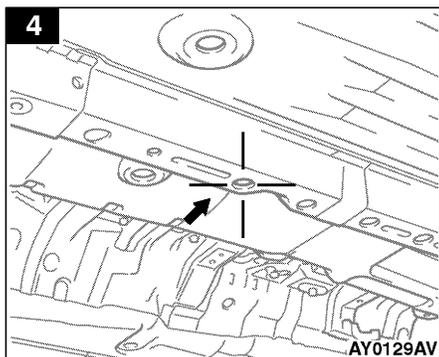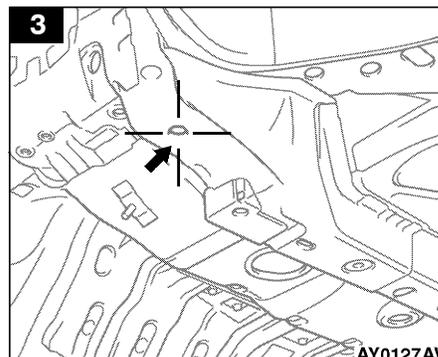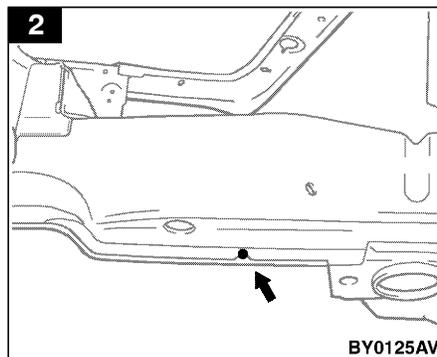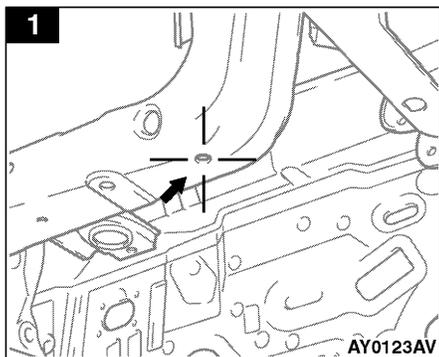


INSTALLATION OF SUSPENSION

mm







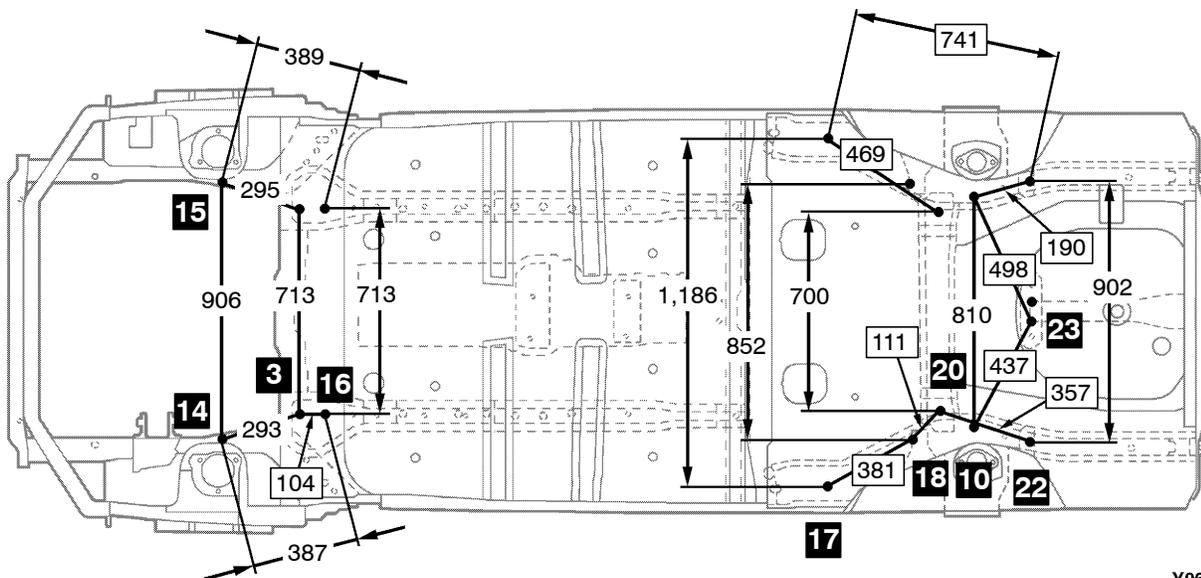


Y0647AV

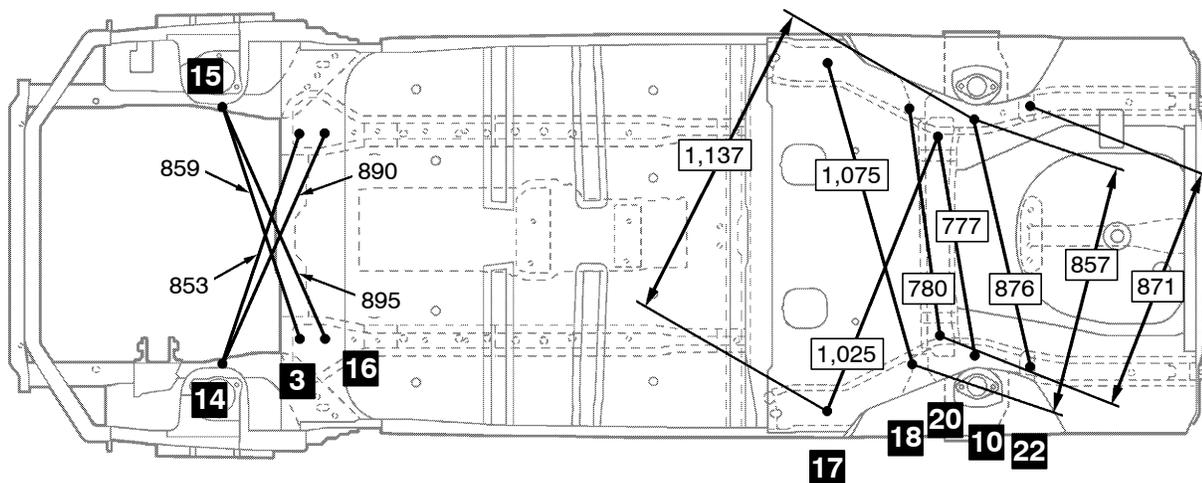

Y0648AV


No.	Standard measurement point	Hole shape - Size mm	No.	Standard measurement point	Hole shape - Size mm
3	Centre of crossmember mounting hole	- 18	17	Trailing arm mounting position	-
10	Centre of crossmember mounting hole	- 14	18	Control link mounting position	-
14	Front edge of crossmember mounting bolt (Left side)	-	20	Front edge of differential support mounting bolt	-
15	Front edge of crossmember mounting bolt (Right side)	-	22	Centre of upper arm mounting hole	- 13
16	Centre of crossmember mounting hole	- 11	23	Centre of crossmember mounting hole	- 15

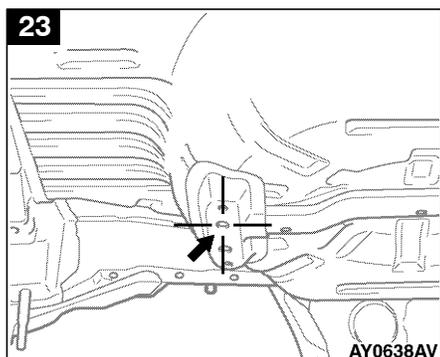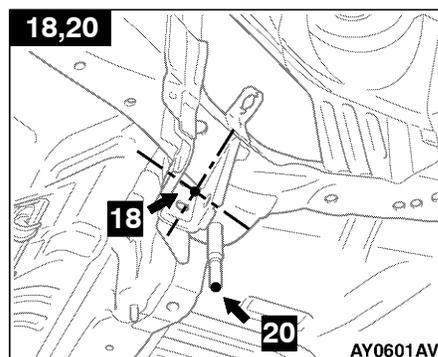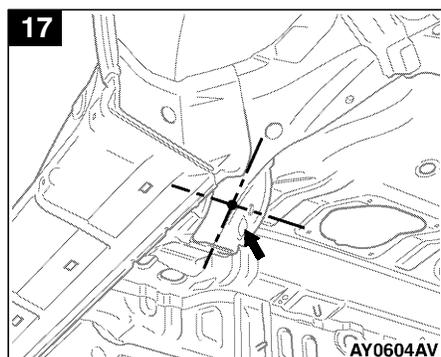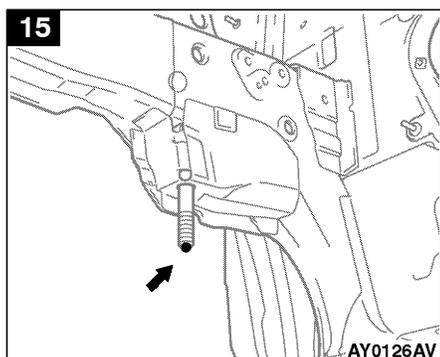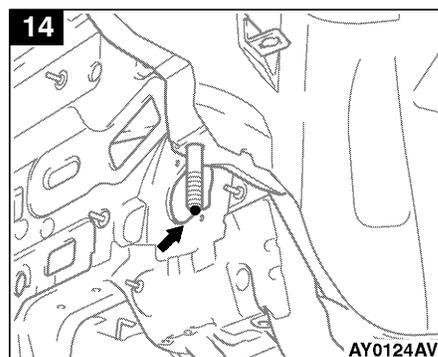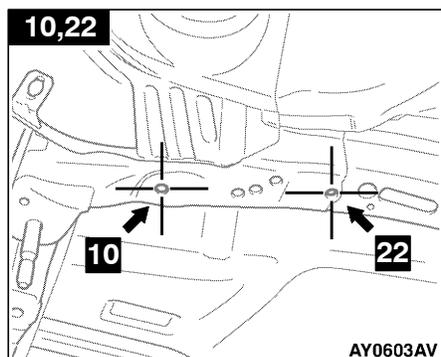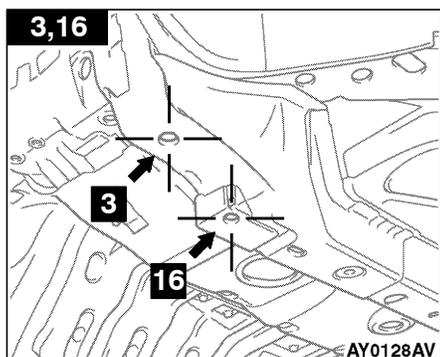


B-12 BODY DIMENSIONS - Type B (Actual-measurement Dimensions)

FRONT BODY

mm










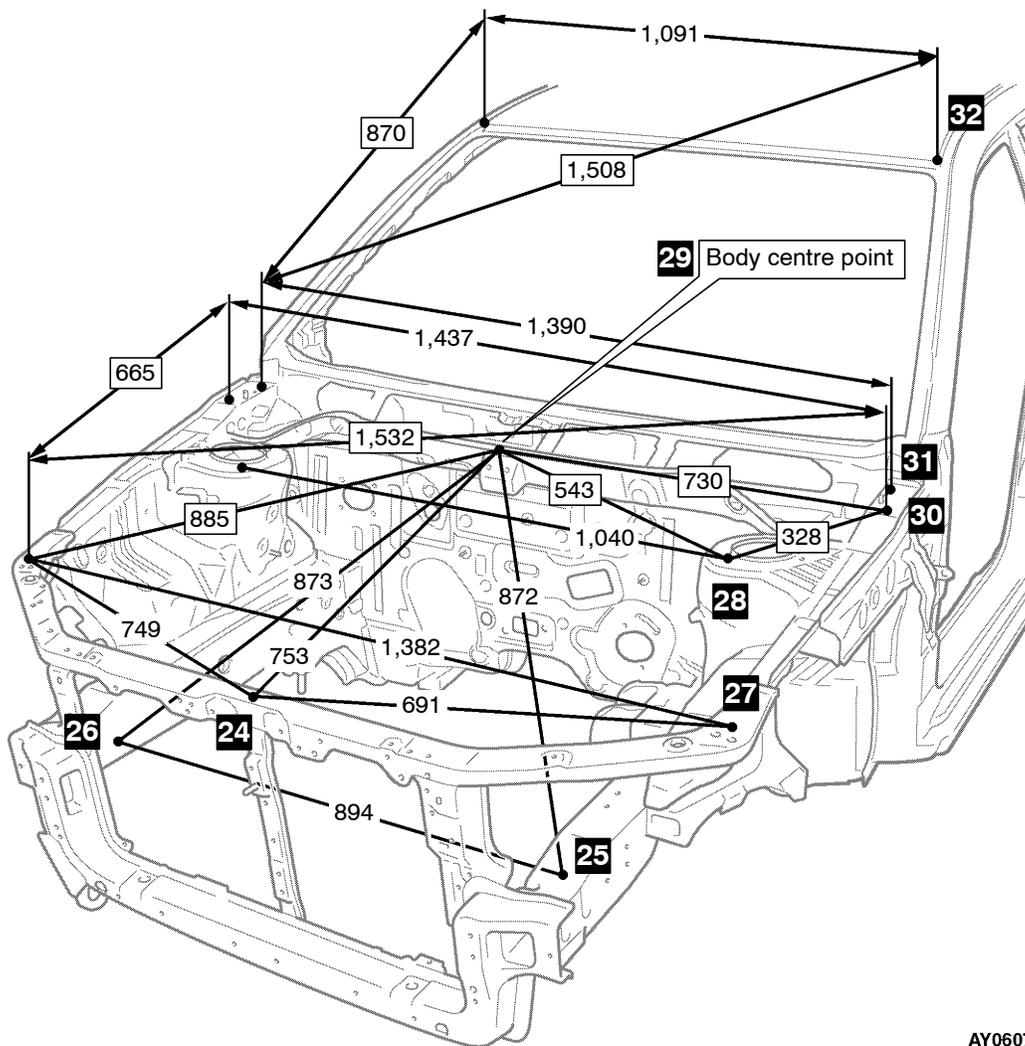


AY0607AV

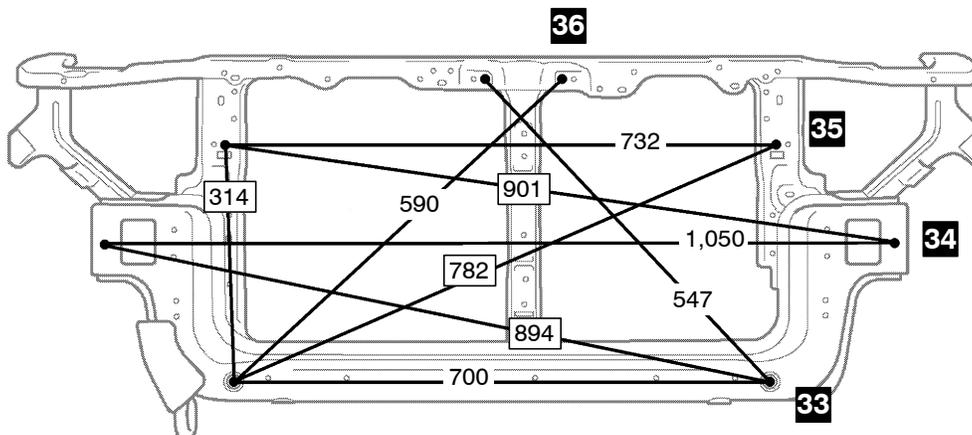

AY0610AV


No.	Standard measurement point	Hole shape - Size mm	No.	Standard measurement point	Hole shape - Size mm
24	Centre of front end crossmember upper drain hole	-8	31	Centre of hood hinge mounting hole	-9
25	Centre of harness clip mounting hole	-7 x 12	32	Corner of roof panel	-
26	Centre of intercooler pipe mounting hole	-9	33	Centre of front end crossmember outer positioning hole	-20
27	Centre of front fender mounting hole	-6.6	34	Centre of front bumper reinforcement mounting hole	-9
28	Centre of front strut mounting hole	-11.5	35	Centre of headlamp mounting hole	-6.6
29	Notch of front deck (Body centre point)	-	36	Centre of hood latch mounting hole	-6.6
30	Centre of front fender mounting hole	-6.6			

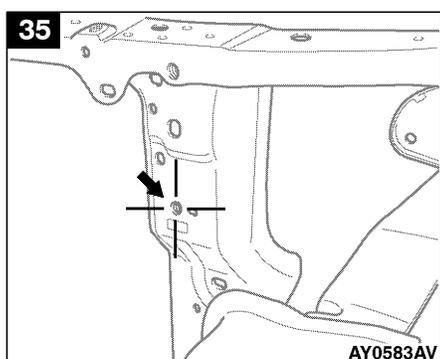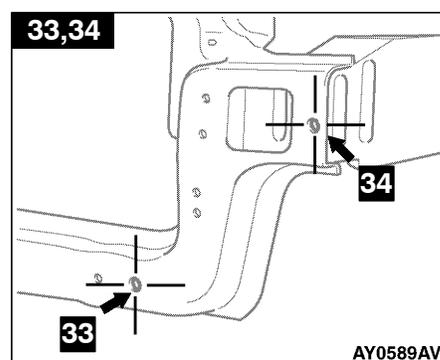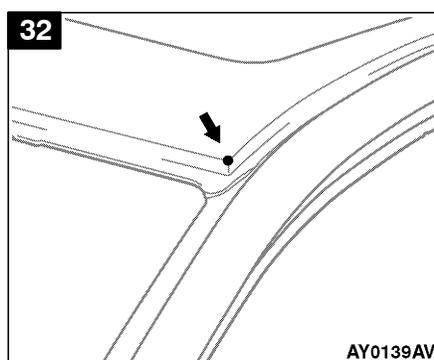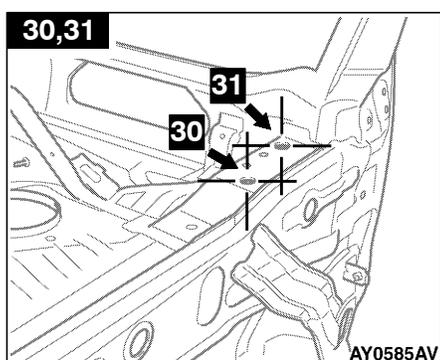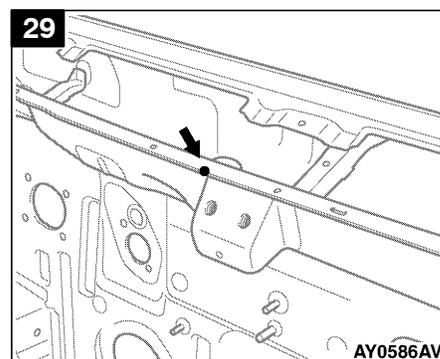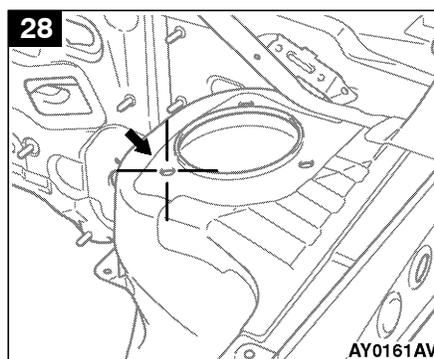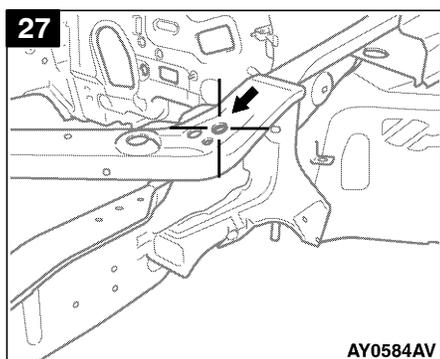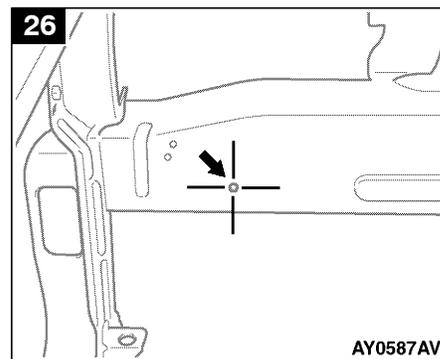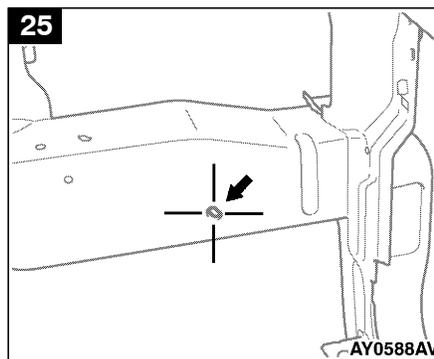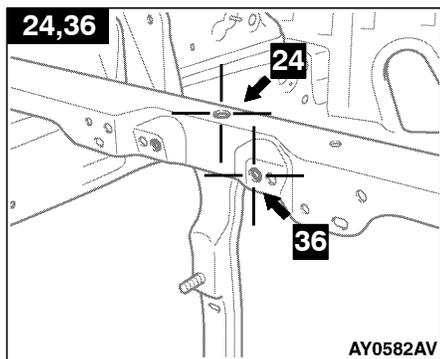


B-14 BODY DIMENSIONS - Type B (Actual-measurement Dimensions)

SIDE BODY

mm



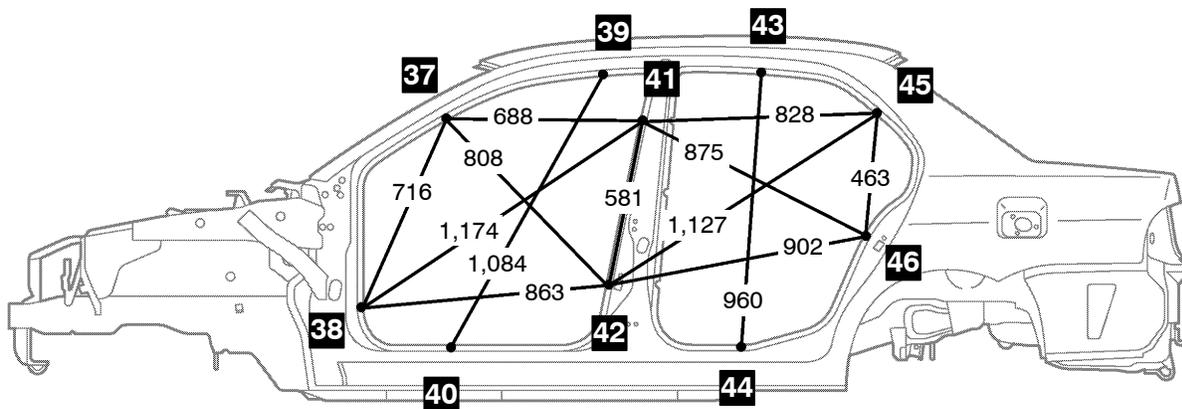


AY0608AV

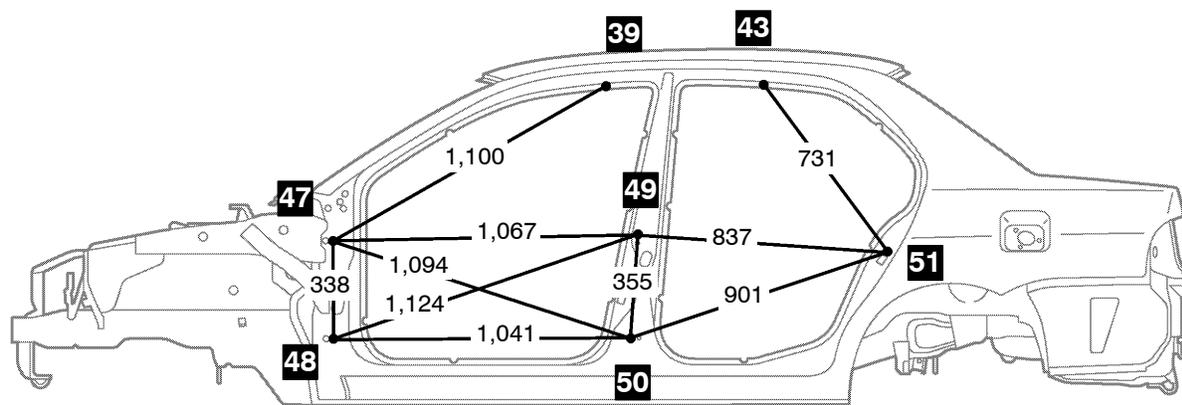


BY0608AV

No.	Standard measurement point	Hole shape	Size - mm	No.	Standard measurement point	Hole shape	Size - mm
37	Front pillar positioning notch (Upper section)	-		45	Quarter panel positioning notch (Upper section)	-	
38	Front pillar positioning notch (Lower section)	-		46	Quarter panel positioning notch (Lower section)	-	
39	Side roof rail positioning notch (Front section)	-		47	Centre of front door hinge mounting hole (Upper section)	-11	
40	Side sill positioning notch (Front section)	-		48	Centre of front door hinge mounting hole (Lower section)	-11	
41	Centre pillar positioning notch (Upper section)	-		49	Centre of rear door hinge mounting hole (Upper section)	-11	
42	Centre pillar positioning notch (Lower section)	-		50	Centre of rear door hinge mounting hole (Lower section)	-11	
43	Side roof rail positioning notch (Rear section)	-		51	Centre of rear door switch mounting hole	-5	
44	Side sill positioning notch (Rear section)	-					

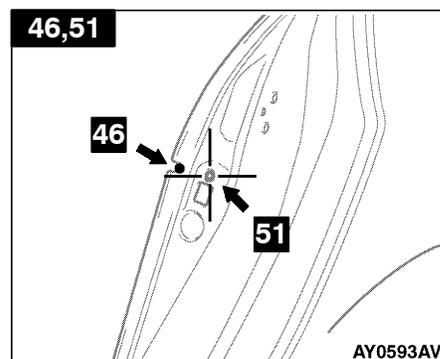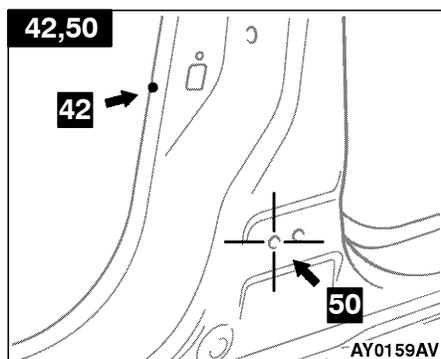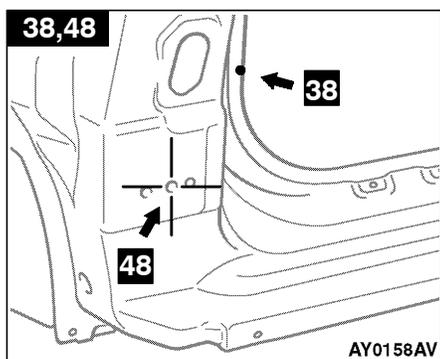







REAR BODY

mm

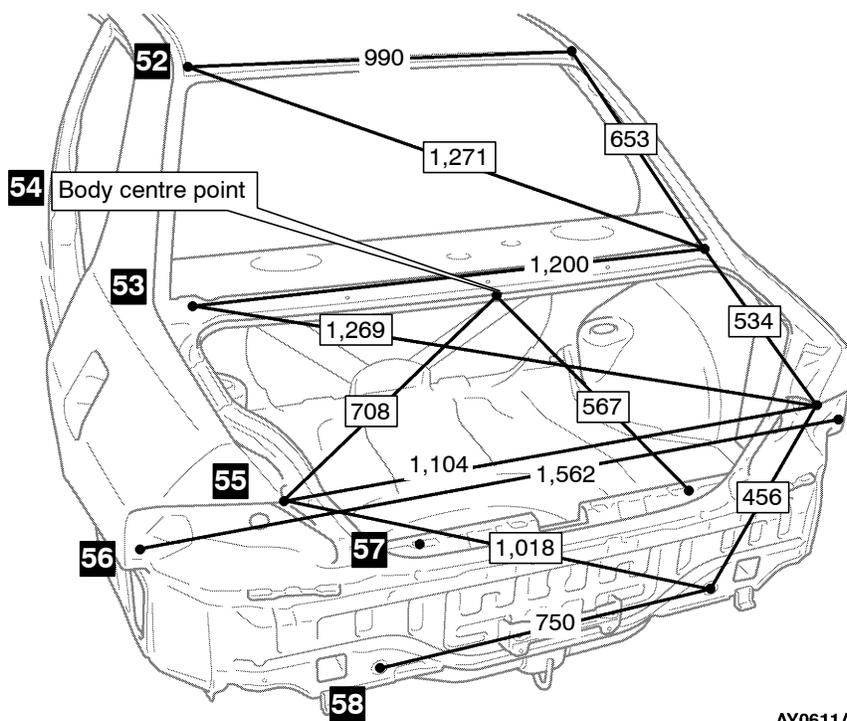


AY0611AV

No.	Standard measurement point	Hole _ Size shape _ mm	No.	Standard measurement point	Hole _ Size shape _ mm
52	Corner of roof panel	-	56	Centre of rear combination lamp mounting hole	-10
53	Centre of rear window moulding mounting hole	-7 x 11	57	Centre of rear end trim mounting hole	-8.5
54	Rear shelf body centre point	-	58	Centre of rear end outer panel positioning hole	-16
55	Corner of side outer panel	-			

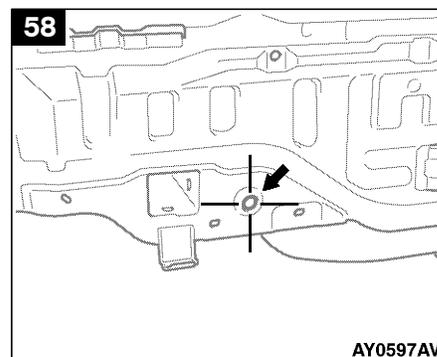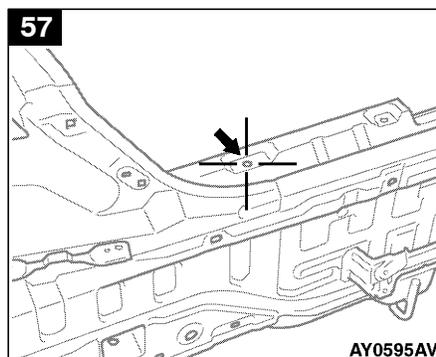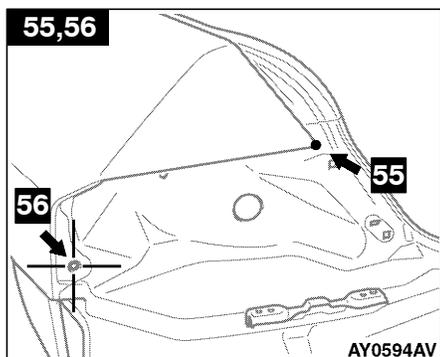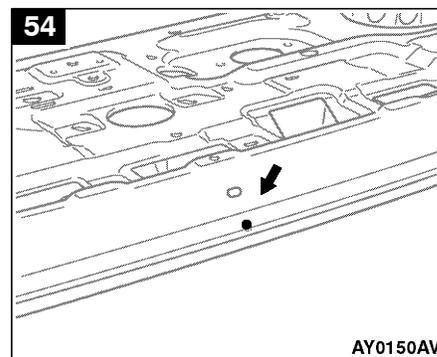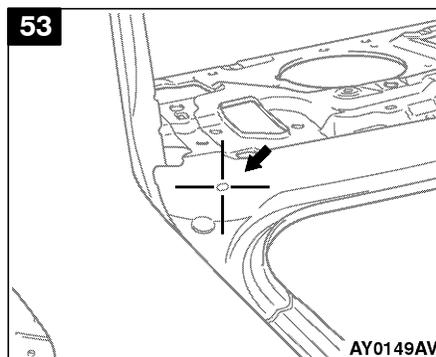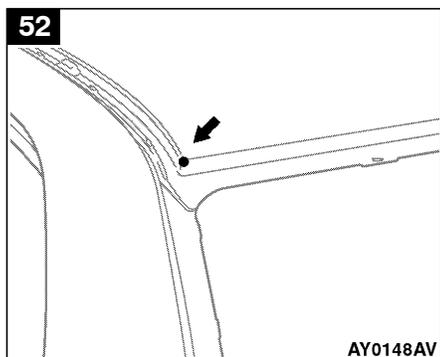


INTERIOR


mm

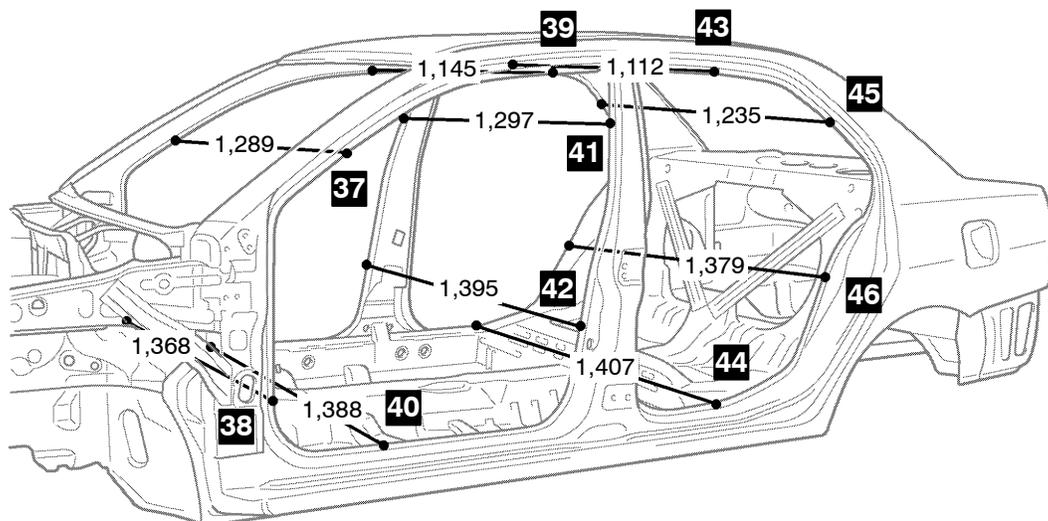

AY0509AV

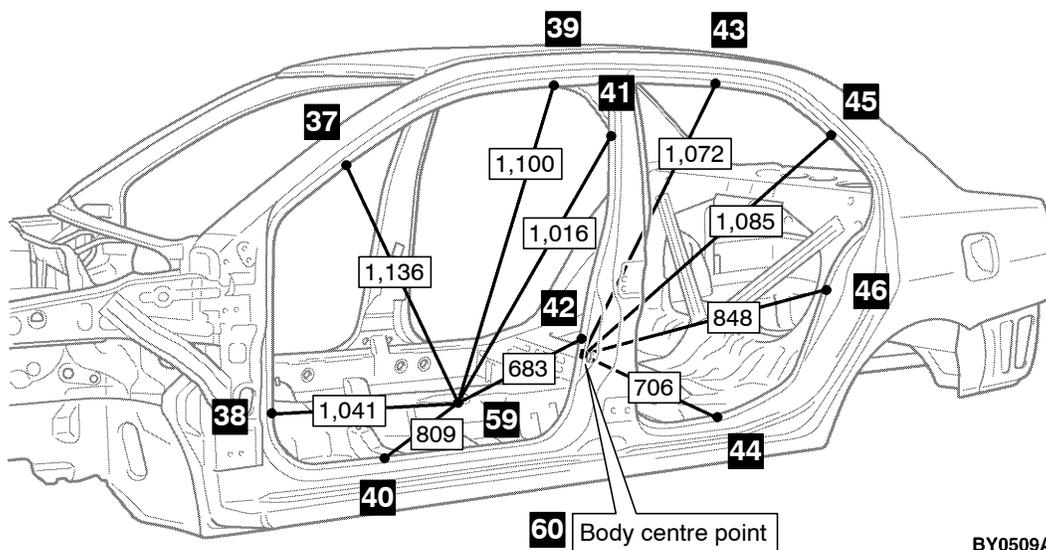


BY0509AV

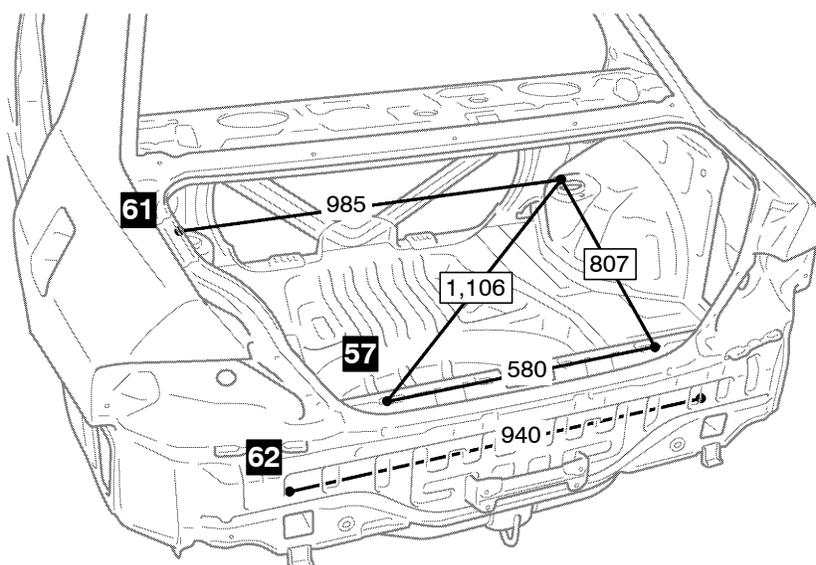







BY0644AV

mm

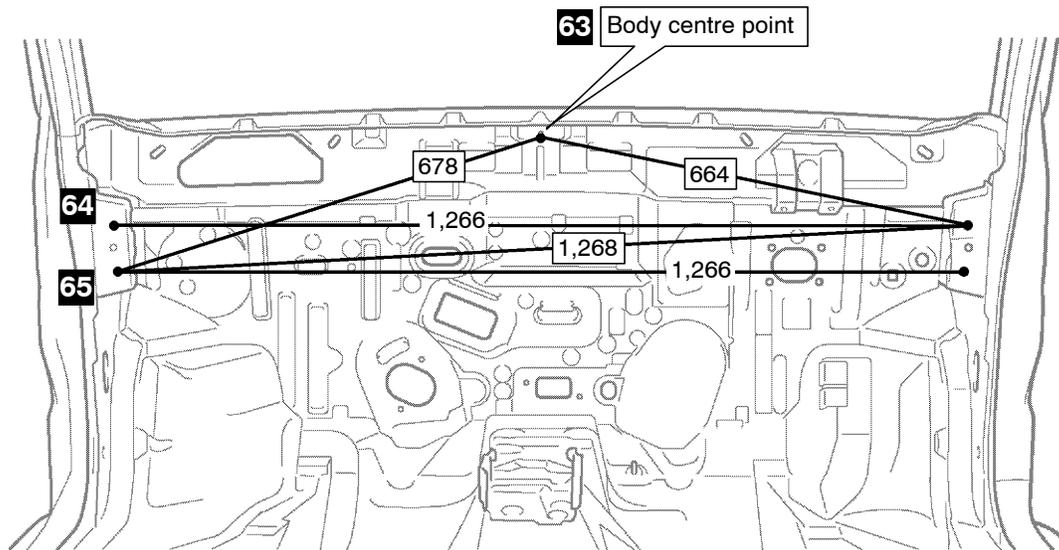

AY0168AV

No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
37	Front pillar positioning notch (Upper section)	-		46	Quarter panel positioning notch (Lower section)	-	
38	Front pillar positioning notch (Lower section)	-		57	Centre of rear end trim mounting hole	-	-8.5
39	Side roof rail positioning notch (Front section)	-		59	Centre of front seat rail mounting hole	-	-14
40	Side sill positioning notch (Front section)	-		60	Centre of floor carpet mounting hole (Body centre point)	-	-6
41	Centre pillar positioning notch (Upper section)	-		61	Centre of rear shock absorber mounting hole	-	-12
42	Centre pillar positioning notch (Lower section)	-		62	Centre of rear end crossbar mounting hole	-	-16
43	Side roof rail positioning notch (Rear section)	-		63	Front of instrument panel bracket center (Body centre point)	-	
44	Side sill positioning notch (Rear section)	-		64	Centre of deck crossmember mounting hole (Upper section)	-	-11
45	Quarter panel positioning notch (Upper section)	-		65	Centre of deck crossmember mounting hole (Lower section)	-	-11

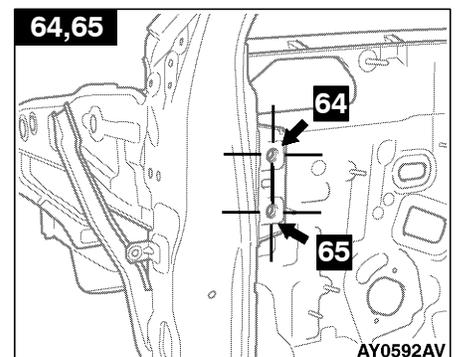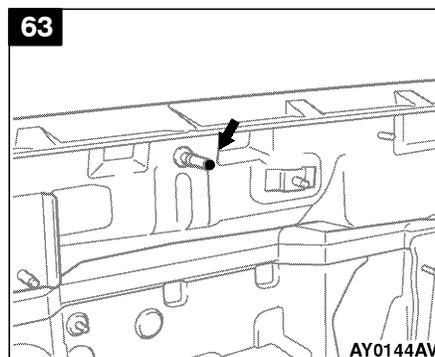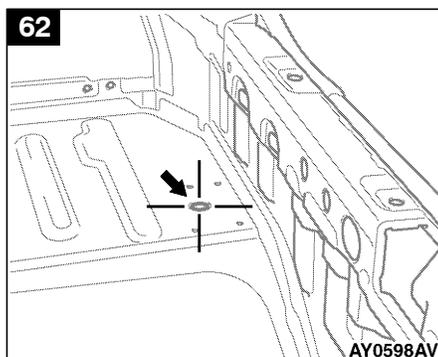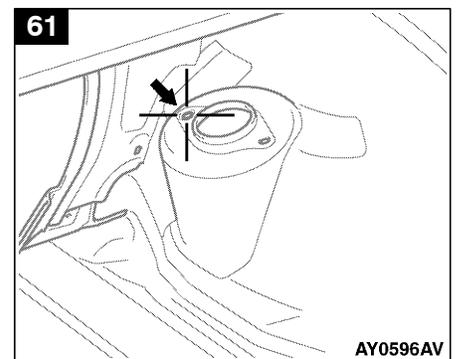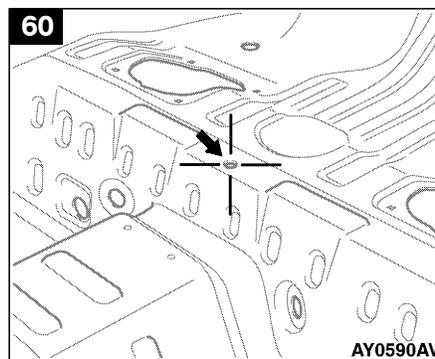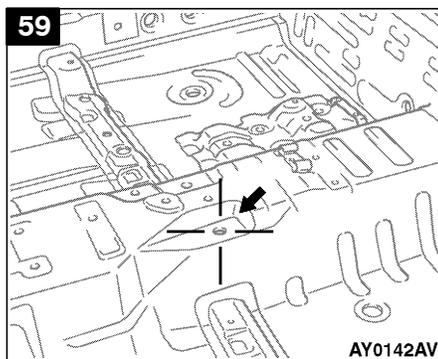

NOTES